



Wolverine Geneva Double Curtain Trellis System

Thank you for your purchase of the Agritek/Wolverine Geneva Double Curtain Trellis system arms and brackets! With proper use and care they will provide you with many years of trouble free service!

Items needed for assembly and installation:



- 3/8-16 X 1-1/2" galvanized bolts for "T" style posts (3 per assembly)
- 3/8-16 X 1-1/2" to 2" galvanized bolts for Wood posts (2 per assembly)
- 3/8-16 Ny-lock self locking nuts
- 6-32 X 5/8" galvanized bolts and ny-lock nuts for wire end clips
- Adjustable wrench's
- Channel lock pliers and/or appropriate sized sockets
- Screwdrivers
- Gloves
- Safety glasses or goggles

CAUTION: There may be sharp edges on the trellis components. Please handle all items with care to avoid injury!

For ease of installation, it is easier to make up trellis sub-assemblies on a flat surface prior to installation on the post system you are using.

Assembly of the arms and brackets is relatively straight forward. For each post you wish to mount a trellis assembly on you will need two(2) trellis arms; two(2) trellis brackets (either the metal "T" style post brackets or the wood post mounting brackets) and two(2) double locking wire end clips and their associated hardware.


“T” style post assembly:

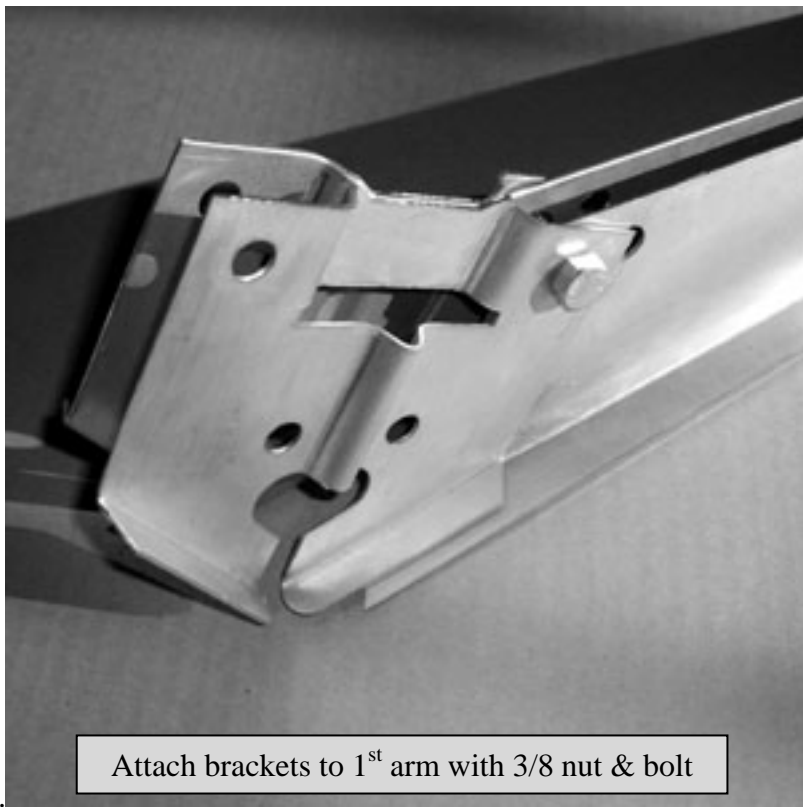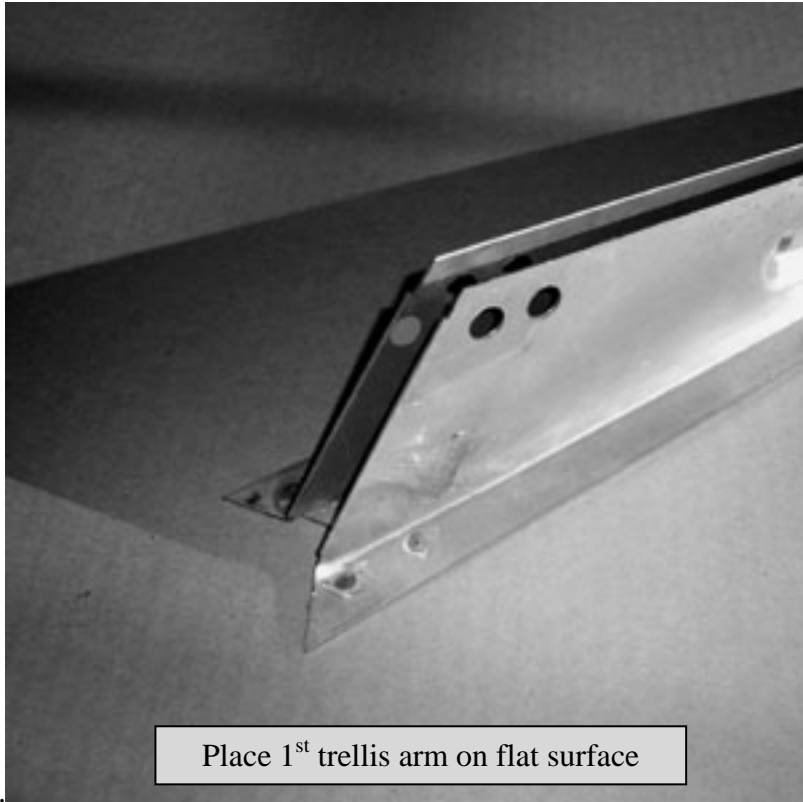




3.

Attach 2nd arm to brackets with 3/8 nut & bolt

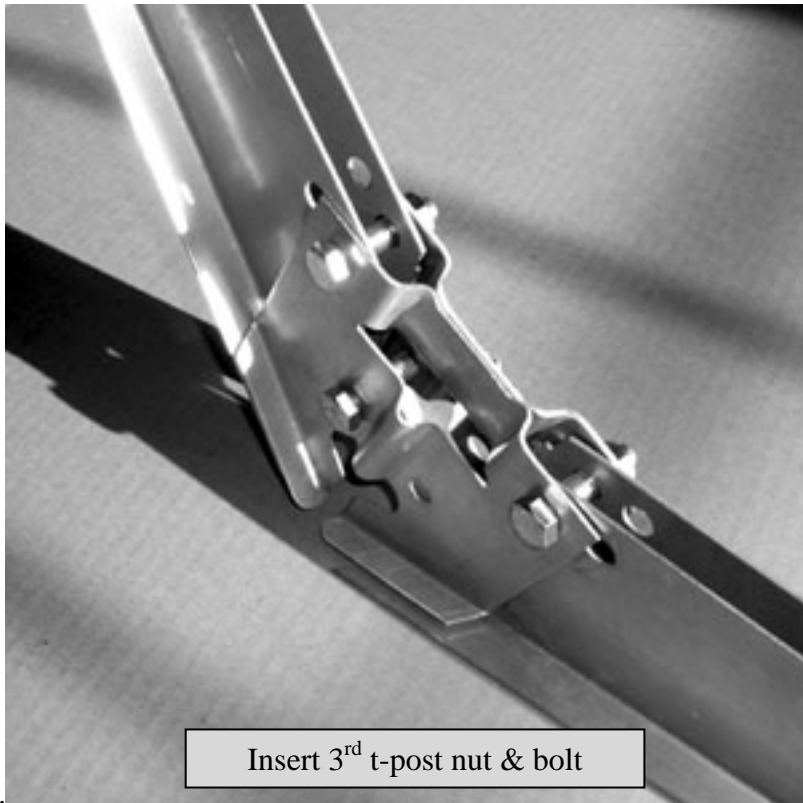

4.

Insert 3rd t-post nut & bolt

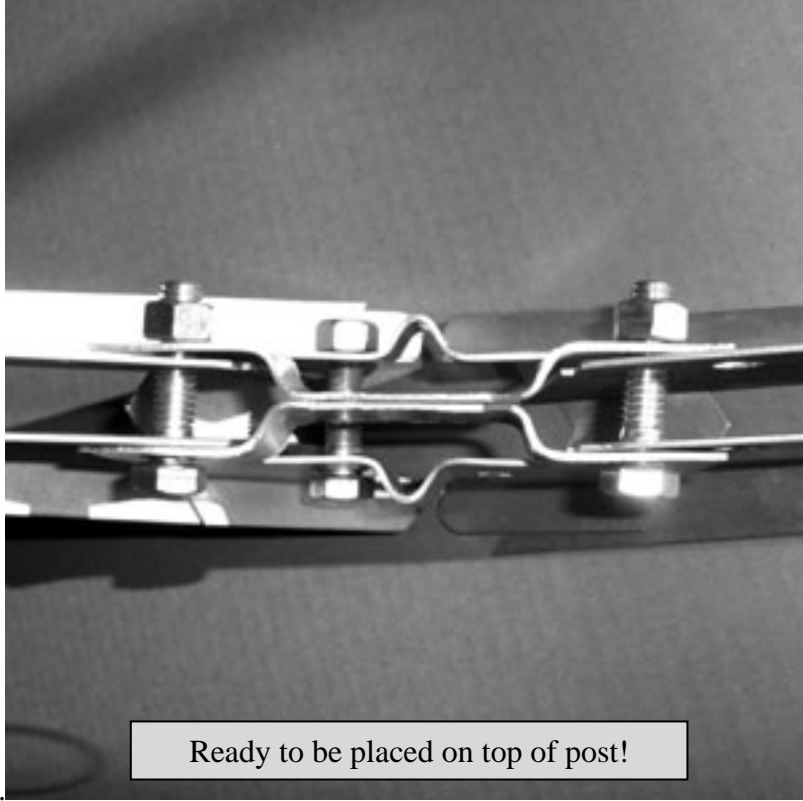

Ready to be placed on top of post!

5.



Slide over top of "T" post & tighten all nuts and bolts. Note "T" post orientation

6.



7.


After trellis wire is run and in place, slide double locking wire end clips over end of trellis arms.




8.

Fasten and tighten double locking wire end clips with 6-32 X 5/8 nut & bolt

Wood Post Assembly:

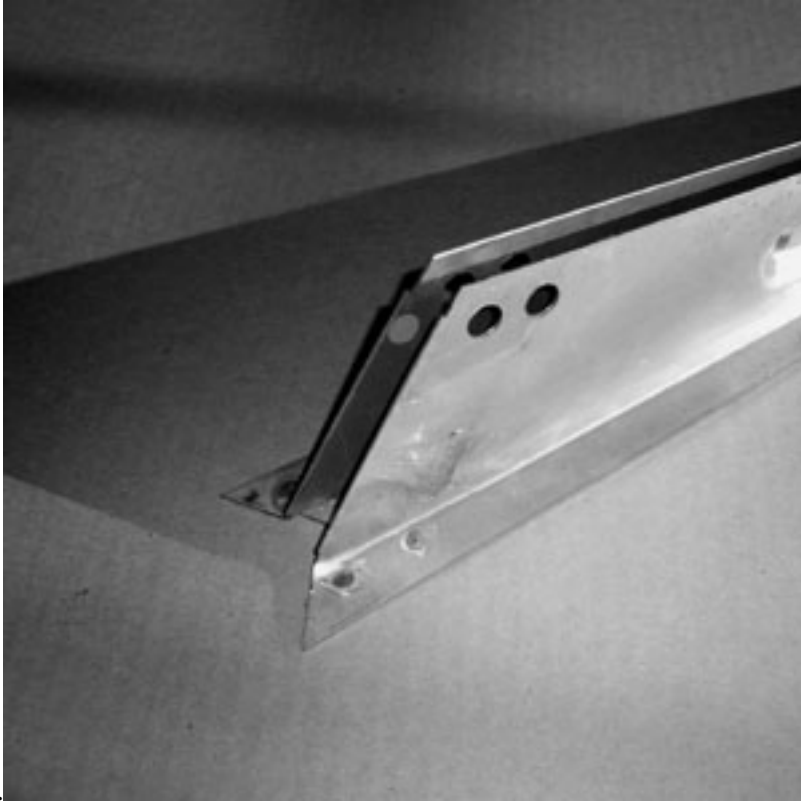


1.

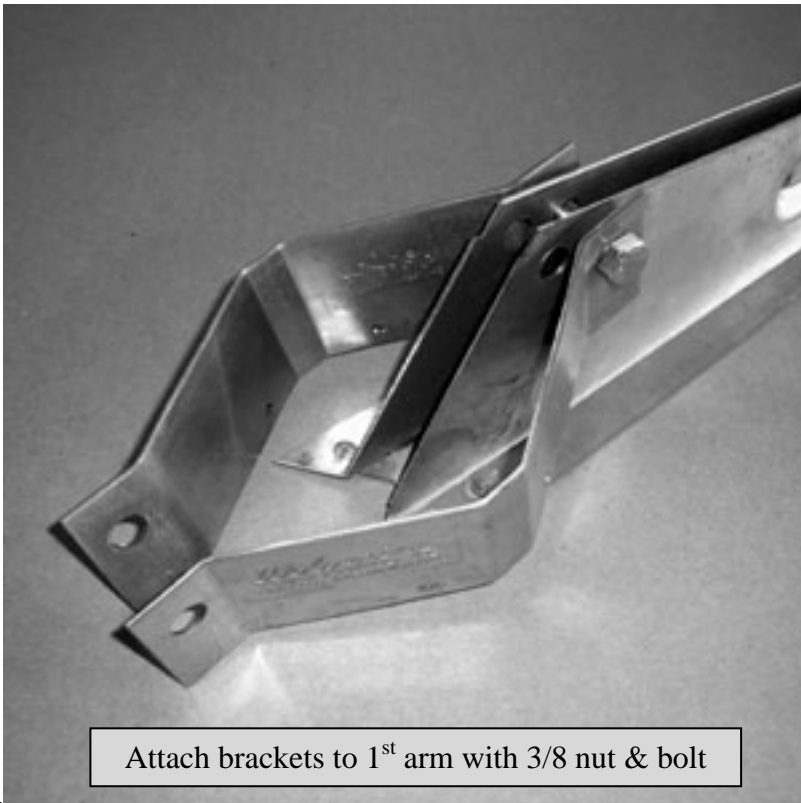

Attach brackets to 1st arm with 3/8 nut & bolt

2.

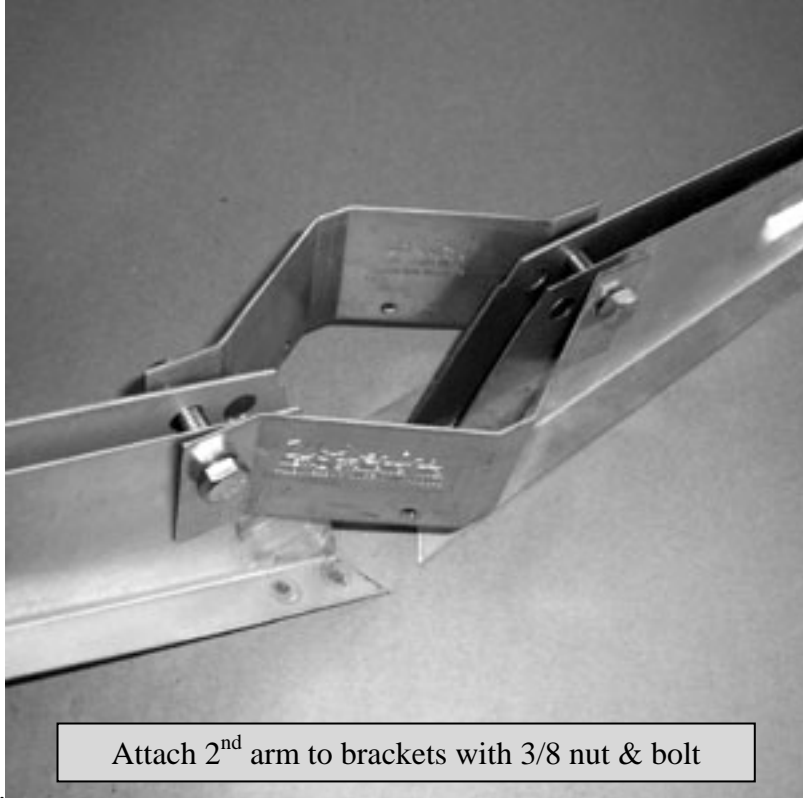



Slide assembly over top of wood post and into position...


5.

Once trellis assembly is in position hand tighten all nuts & bolt till snug. Press down on trellis arms to seat into wood....



...once seated, completely tighten all nuts & bolts with tools of choice.

6.

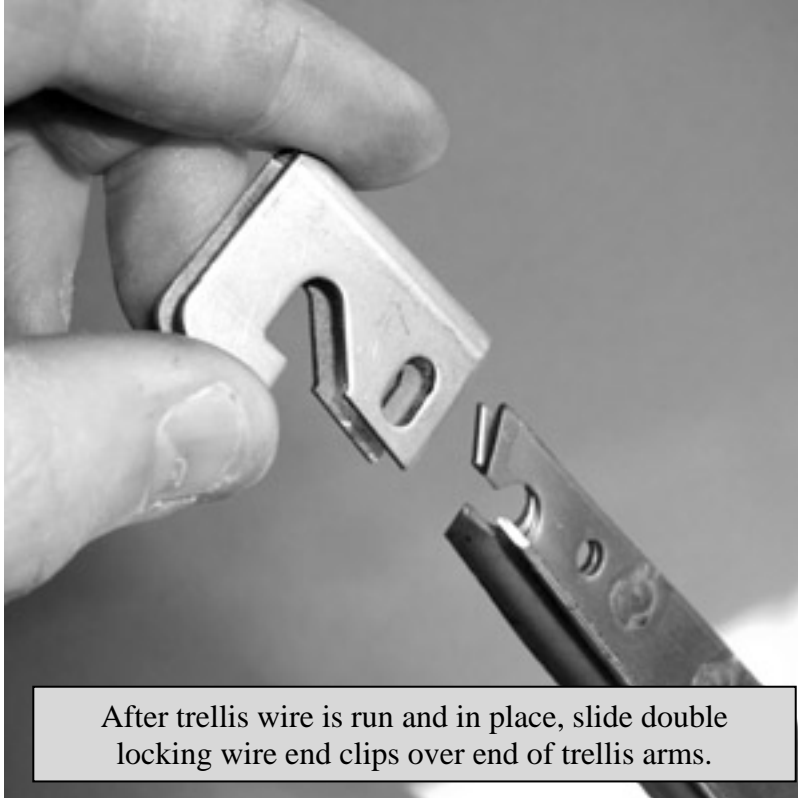

7.

After trellis wire is run and in place, slide double locking wire end clips over end of trellis arms.



8.

Fasten and tighten double locking wire end clips with the 6-32 X 5/8 nuts & bolts.